



Mercedes-Benz
The best or nothing.

star bulletin



Date: June 3, 2013
Order No.: S-B-42.10/123
Group: 42

SUBJECT: MY-All, Models All
Cleaning Axle Hubs When Installing Brake Discs

It is imperative that when installing brake discs (front or rear) the excessive corrosion / scaling (Figure 1), which may have developed on the axle hub, be removed. Use a conventional wire brush or similar tool to remove the corrosion / scaling over the entire area where the brake disc mounts to the hub flange.

Failure to remove the corrosion / scaling may cause an excessive build-up which can create adverse forces that may result in brake vibrations / judder.



Figure 1.

This bulletin has been created and maintained in accordance with MBUSA-SLP S423QH001, Document and Data Control, and MBUSA-SLP S424HH001, Control of Quality Records.