





Date: May 29, 2013 Order No.: S-B-91.40/200

Group: 91

SUBJECT: MY-All, Models All with Pre-Safe Code 299

Adaptation of Reversible Emergency Tensioning Retractor

After buckling the seat belt with the ignition/engine on, the driver or front passenger seat belt tension adjusts automatically and any belt slack is eliminated. Should customers complain of this, explain the operating system of the belts.

If desired, this can be deactivated from its automatic setting, but it is not covered under warranty.

Procedure

Deactivate in the instruction cluster via Settings \rightarrow Comfort \rightarrow Seat belt adjustment. This is also covered in the Operator's Manual.

This bulletin has been created and maintained in accordance with MBUSA-SLP S423QH001, Document and Data Control, and MBUSA-SLP S424HH001, Control of Quality Records.